

# TEAC WS-A70

## Network Music System


### Quick Start Guide (Network Setup)

#### Before you start

The WS-A70 requires network connection via either Wireless LAN (Wi-Fi) or LAN Cable.

This Quick Start Guide explains how to connect the WS-A70 to the same network to which your smartphone or tablet is connected, and set the WS-A70 to play music.

#### Music Playback via Wireless LAN (Wi-Fi)

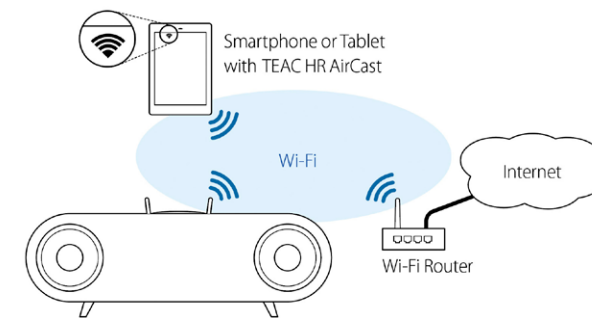

Confirm that your smartphone or tablet is connected to your Wi-Fi.


Use AirPlay Settings or Google Home app to apply network settings to the WS-A70.

Use Google Home (see page 2 and 3)

Use AirPlay\* (see page 4) \*iOS only

Connection completes.

#### Music Playback via LAN cable

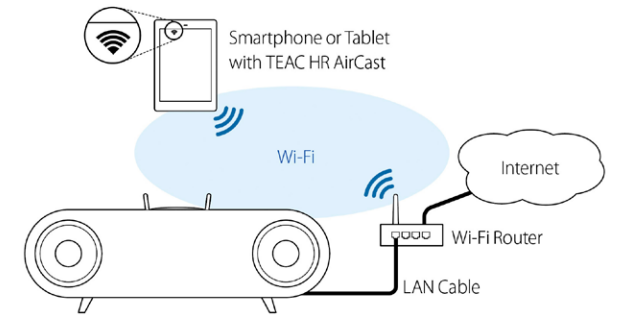

Connect the WS-A70 and Wi-Fi Router via a LAN cable.

IP Address is automatically assigned Connection completes.

Visit the TEAC web site and see the "Start up the App" section in the Network Application Manual (PDF).



1. Scan the QR code. (<http://teac-global.com/>)
2. Select your country/region in the TEAC Downloads section (lower left).
3. Select the WS-A70.
4. Select the Network Application Manual (PDF).

# Connecting with Google Home app

Before you start this step, install the Google Home app from the App Store or Google Play (free download).

